

## UDI1500 MICRO-PRO Universal Digital Indicator

## Model Selection Guide

### Instructions

- Select the desired key number. The arrow to the right marks the selections available.
- Make one selection each from Tables I through IX using the column below the proper arrow.

Key Number      I      II      III      IV      V      VI      VII      VIII      IX  
 [ ] - [ ] - [ ] - [ ] - [ ] - [ ] - [ ] - [ ] - [ ] - [ ]

KEY NUMBER	Description	Selection Availability			
1/8 DIN Indicator 48x96mm <b>Input Type</b> (Field Selectable)	RTD or Linear mV Thermocouple Linear mA Linear Voltage	DI1501 DI1502 DI1503 DI1504	↓   ↓	↓   ↓	↓   ↓

**TABLE I**

<b>Output 1</b> (Alarm 1)	Relay	1	•	•	•	•
------------------------------	-------	---	---	---	---	---

**TABLE II**

<b>Output 2</b>	None	0	•	•	•	•
	Relay	1	•	•	•	•
<b>Output 2</b>	Linear: 0 to 10 Volts	3	•	•	•	•
	Linear: 0 to 20 ma	4	•	•	•	•
	Linear: 0 to 5 Volts	5	•	•	•	•
(Retransmission only)	Linear: 4-20mA	7	•	•	•	•

**TABLE III**

<b>Output 3</b>	None	0	•	•	•	•
	Relay	1	•	•	•	•
	Transmitter Power Supply	8	•	•	•	•

**TABLE IV**

<b>Option 1</b>	No Selection	0	•	•	•	•
	RS485 MODBUS and ASCII Communications	1	•	•	•	•
	Digital Input (one remote reset input)	2	•	•	•	•

			DI150 _	Availability			
			Selection	↓	↓	↓	↓
				1	2	3	4
TABLE V	Option 2	Power Supply 90 to 264 Vac	1	•	•	•	•
		Power Supply 24 to 48 Vac/dc	2	•	•	•	•

**TABLE VI**

Option 3	Red LED Display	0	•	•	•	•
	Green LED Display	1	•	•	•	•

**TABLE VII**

Manuals	EN11-6179 English Manual	0	•	•	•	•
	FR11-6179 French Manual	1	•	•	•	•
	GE11-6179 German Manual	2	•	•	•	•

**TABLE VIII**

Packaging	Individual Carton	0	•	•	•	•
	Bulk Pack of 10 identical models	1	•	•	•	•
	Bulk Pack of 50 identical models	2	•	•	•	•

**TABLE IX**

Special	None	0	•	•	•	•
	Special Instrument (Consult Factory)	S	•	•	•	•